



**Innovation and technology
for a sustainable future**



We are a technology-based company that provides consulting and engineering services focused on the treatment, purification, and valorization of liquid and gaseous streams through innovative technologies

Index

The company	01
About us	01
Our values	03
Main fields of action	04
Services	05
Grant funding	06
Environmental consultancy	06
R&D to improve processes and products	07
Scale-up of innovative technologies	07
Products	08
Based on membranes	09
Based on advanced oxidation	12
ELOXIRAS®	20
Other products	23
R&D actions	24





THE COMPANY



About us

Introduction

Our main objective is to offer innovative alternatives for the treatment, purification and valorization of streams, providing bespoke solutions to our clients.



INNOVATIVE SME
Valid until Nov 20th 2021



- An SME innovative company founded in 2006 as a spin-off from R&D projects managed by the University of Cantabria.
- Activity strongly influenced by R&D actions.
- Highly specialized human resources, with more than 10 engineers.

Location

APRIA Systems S.L.

Parque Empresarial de Morero,
Parcela P.2-12, Nave 1 - Puerta 5
39611 Guarnizo, Cantabria, Spain





Pedro M. Gómez
Chief Executive Officer (CEO)

Phone: +34 942 078 147
e-mail: pedro.gomez@apriasystems.es



Sara Domínguez
Chief Commercial Officer (CCO)

Phone: +34 656 317 801
e-mail: sara.dominguez@apriasystems.es



Javier Pinedo
Chief Technology Officer (CTO)

Phone: +34 942 078 147
e-mail: javier.pinedo@apriasystems.es



Esther Santos
Chief Administrative Officer (CAO)

Phone: +34 942 078 147
e-mail: esther.santos@apriasystems.es



Axel Arruti
Chief Operating Officer (COO)

Phone: +34 942 078 147
e-mail: axel.arruti@apriasystems.es

Our values



Commitment

Our team works to offer our clients suitable solutions for their needs, **executing high-quality projects** under the **established terms and conditions**.

Modernity

APRIA Systems **continuously updates and improves its know-how** to offer cutting-edge solutions characterized by their optimal efficacy, yield, and environmental protection.



Service


We strive to provide a tailored and close service for each client and project. **Our service is flexible**, adaptable, and easily transferable to our clients' requirements and working methodology.

Sustainability

Our solutions aim to be **well balanced in terms of economic, social, and environmental aspects**. Our designs and proposals promote the minimization of raw material, energy consumption, and waste production, together with a high productivity and user-friendliness.



Main action fields

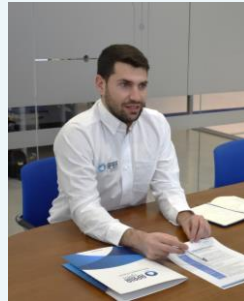

APRIA Systems aims to contribute to the sustainability of the current production model through tools like the knowledge, innovation, technology, creativity, capacity, and excellence.





SERVICES



Our services are flexible, adaptable, and easily transferable to our clients' requirements.



Grant funding

Our own experience in participating in different R&D funding schemes, has given us a broad insight of funding opportunities at European, national, and regional level. Therefore, we can take advantage of this experience to provide:

- Identification of funding opportunities.
- Design and redaction of a proposal aligned with the call requirements.
- Support for the project acceptance and follow-up.
- Assessment for the final justification.



Environmental consultancy



We can offer our experience in fulfilling environmental regulations and as environmental assessment, including:

- Integrated Environmental Authorization.
- Compliance with regulations related with hazardous substances.
- Risk-based soil quality assessment.
- Strategies for adequate water reclaim and reuse.

R&D to improve processes and products



If you have a challenge related to the enhancement of a process or product that cannot be solved using traditional approaches, we can evaluate your case and offer you cutting-edge technologies to solve it:

- Identification of feasible alternatives from a technical point of view.
- Definition of critical parameters through tests and studies.
- Economic assessment of the alternatives, allowing hierarchical organization.

Scale-up of innovative technologies

For technologies that offer positive outcomes to our clients, we provide engineering services for its integration in current industrial facilities:

- Technology implementation advice.
- Design of the solution to meet client requirements –adaptation to the specific industrial process–.
- Construction and assembly of the equipment.
- Start up.





PRODUCTS



Our know-how allows us to act as technological supplier of a wide range of **tailored equipment** always customized based on the needs of each client.

We are specialized in providing cutting-edge technologies, mainly based on **membranes or advanced oxidation processes**. However, upon request, our extensive experience in the area of chemical engineering allows us to offer equipment based on other technologies.


Moreover, we market and sell **ELOXIRAS®**, a novel process for the treatment and reuse of marine and brackish water in the aquaculture industry.



Based on membranes

Introduction

Membrane technology is commonly employed in advanced separation processes. The use of semipermeable membranes allows the generation of two streams, retentate and permeate. APRIA Systems designs and supplies, from lab scale up to industrial scale, membrane separation facilities as single stage or integrated in hybrid processes.

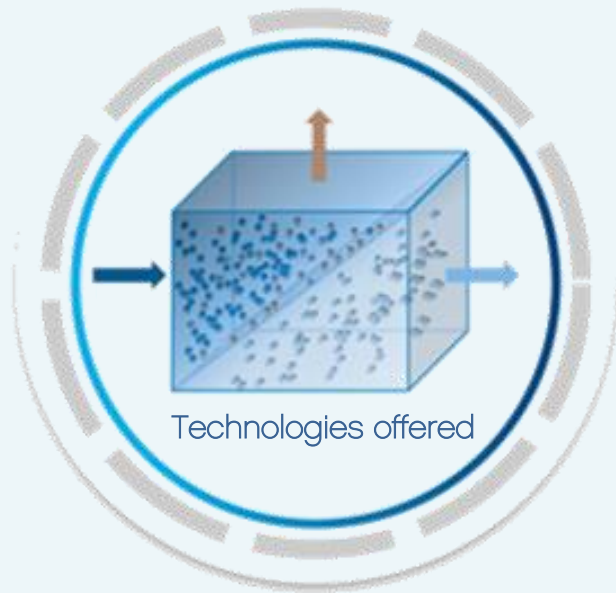

Microfiltration

Ultrafiltration

Nanofiltration

Reverse osmosis

Forward osmosis

Pressure retarded osmosis

Membrane distillation

Gas permeation



Electrodialysis



Available models

We select the most suitable membranes and modules for each application.

Moreover, we know that each project has its specific needs, so where required, **we design and manufacture completely customized membrane modules.**

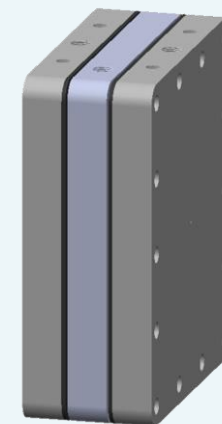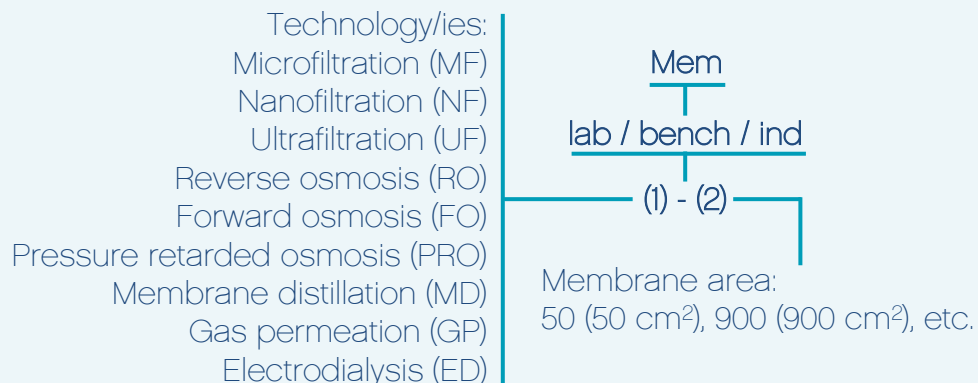

Membrane technology	Electrodialysis (ED) / Forward osmosis (FO) / Gas permeation (GP) / Membrane distillation (MD) / Microfiltration (MF) / Nanofiltration (NF) / Pressure retarded osmosis (PRO) / Reverse osmosis (RO) / Ultrafiltration (UF)
Configuration	Plate-and-frame / Hollow-fiber / Spiral wound / Tubular
Volume of treatment / flow rate	Selectable
Operation mode	Alternating / Batch / Continuous
Scale	Laboratory / Pilot / Industrial
Membrane material	Ceramic / Polymeric
Case material	Polycarbonate / Polypropylene (PP) / Stainless steel
Sealing gaskets material	Ethylene propylene diene monomer (EPDM) / Thermoplastic polyurethane (TPU) / Viton®
Connection type	Barb fitting / Quick plug
Optional features	Automatization / Online measurements (pH, O ₂ , conductivity, etc.) / Temperature control

Equipment references



Membench UF-400000/RO-79000



Memlab FO-100/PRO-100



Memlab MD-250



Membench GP-470

Introduction

Advanced oxidation processes (AOPs) are characterized by the in-situ generation of chemical species with a high oxidation power, mainly hydroxyl radicals.

We have extensive experience in the design, construction, and commissioning of **equipment** based on one or several advanced oxidation processes from laboratory to industrial scale.



Photochemical



- Photocatalysis
- Photo-Fenton
- UV/H₂O₂

Electrochemical

- Electrooxidation
- Electro-Fenton

Photoelectrochemical

- Photoelectrocatalysis
- Photoelectro-Fenton

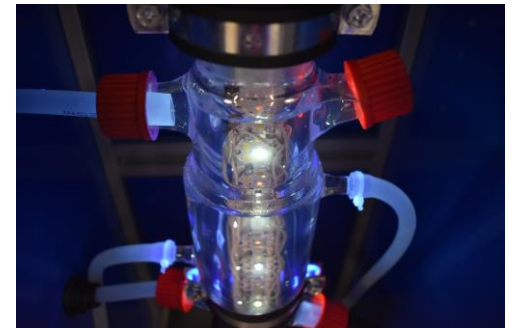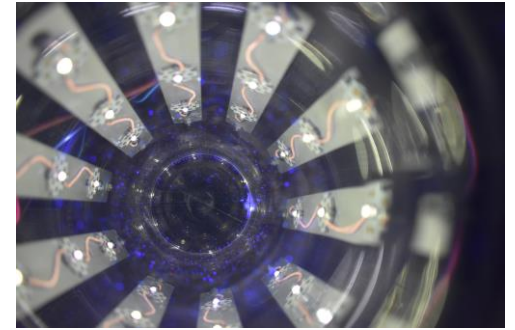


Available models: photochemical

APRIA Systems applies cutting-edge light emitting diode (LED) technology in the equipment to promote the treatment with a minimum energy consumption.


The amount of radiation emitted can be regulated and adjusted to the needs of the oxidation process under study.

The temperature of the LEDs is monitored and controlled through a forced air convection system, allowing for maximum efficiency and useful life of the LEDs.

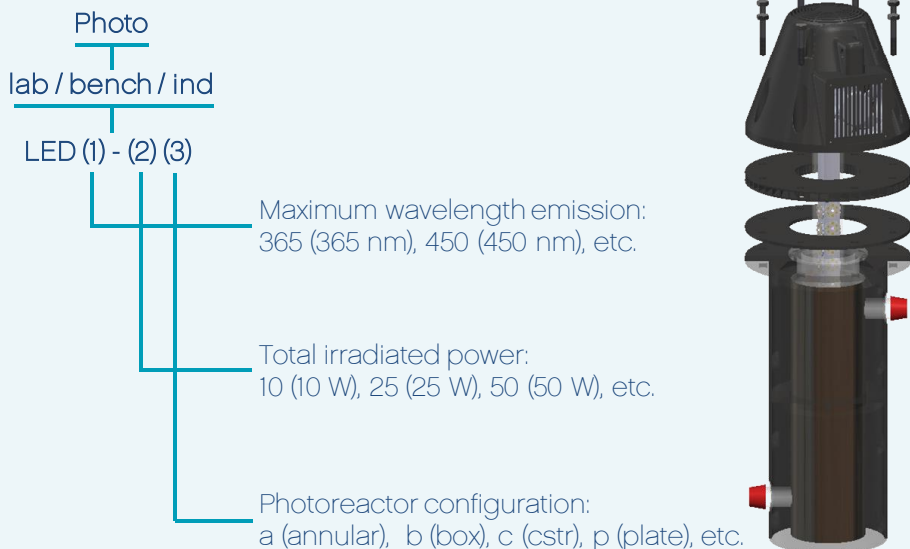

Technologies	Photocatalysis / Photo-Fenton / UV/H ₂ O ₂
Technology of the light source	LED
Reactor configuration	Annular photoreactor / Box / CSTR / Plate
Source of light configuration	External radiation / External + internal radiation / Internal radiation
Volume of treatment / flow rate	Selectable
Operation mode	Alternating / Batch / Continuous
Radiation type	UV-A / UV-B / UV-C / visible / IR
Scale	Laboratory / Pilot / Industrial
Radiant flux	Adjustable through an electric console with PLC
Refrigeration system for the LED	Forced air convection
Reactor material	Borosilicate / Methacrylate / Quartz / Stainless steel
Sealing gaskets material	EPDM / TPU / Viton®
Connection type	Barb fitting / Quick plug
Optional features	Automatization / Online measurements (pH, O ₂ , etc.) / Jacketed reactor / Mirror finish / System to recover the photocatalyst / Temperature control

• Equipment references: photochemical

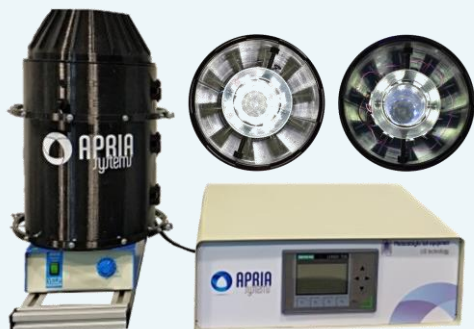

Photolab LED365-24c //
Photolab LED450-24c



Photolab LED275-0.2/365-14i



Photolab LED275-0.01/300-0.03/365-1cb



Photolab LED365-16/450-16a





Photobench LED275-0.8/LED365-16/450-16a



Photobench LED365-64a/CPC5

Available models: electrochemical

APRIA Systems designs customized electrochemical cells, where you can select their configuration, their active anodic area, and the materials of the electrodes. In addition, thanks to its simple connection by quick plug or barb fitting, our equipment offers the possibility of easily exchanging the cells, allowing you to apply the electrochemical treatment with different electrodes in a single equipment.

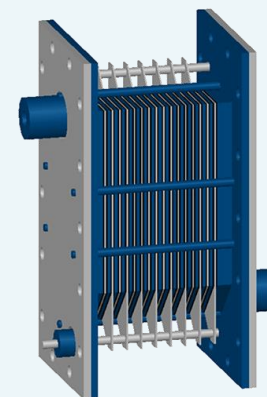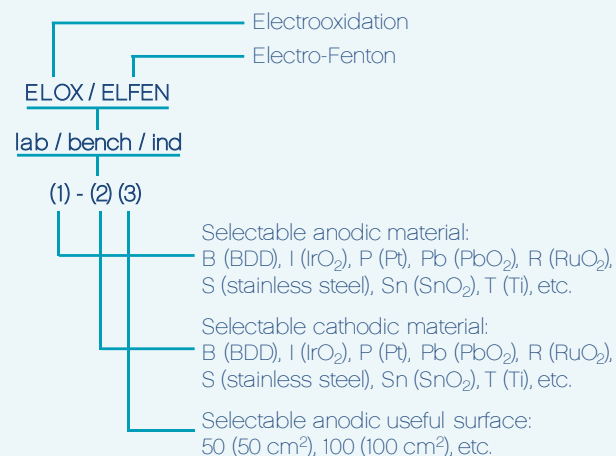

Technologies	Electrooxidation / Electro-Fenton
Configuration	Plate and frame
Volume of treatment / flow rate	Selectable
Operation mode	Alternating / Batch / Continuous
Scale	Laboratory / Pilot / Industrial
Anodic useful surface	Selectable
Separation between electrodes	Adjustable and selectable (> 1 mm)
Number of compartments	Selectable
Electrodes material	BDD / IrO ₂ / Pt / PbO ₂ / RuO ₂ / Stainless steel / SnO ₂ / Ti
Case material	Polypropylene / Stainless steel
Sealing gaskets material	EPDM / TPU / Viton®
Connection type	Barb fitting / Quick plug
Optional features	Automatization / Online measurements (pH, O ₂ , etc.) / Temperature control

Equipment references: electrochemical



ELOX labI-T50



ELOXlab B-B50



ELOXlab B-T270





Photolab LED365-16/450-16a/ELOXlab B-S210



ELOXbench R-R4900

Available models: photoelectrochemical


We use LED technology as source of light, and the amount of radiation emitted can be adjusted to the needs of the treatment. Regarding the electrodes, the client can select their active anodic area, configuration, and materials.

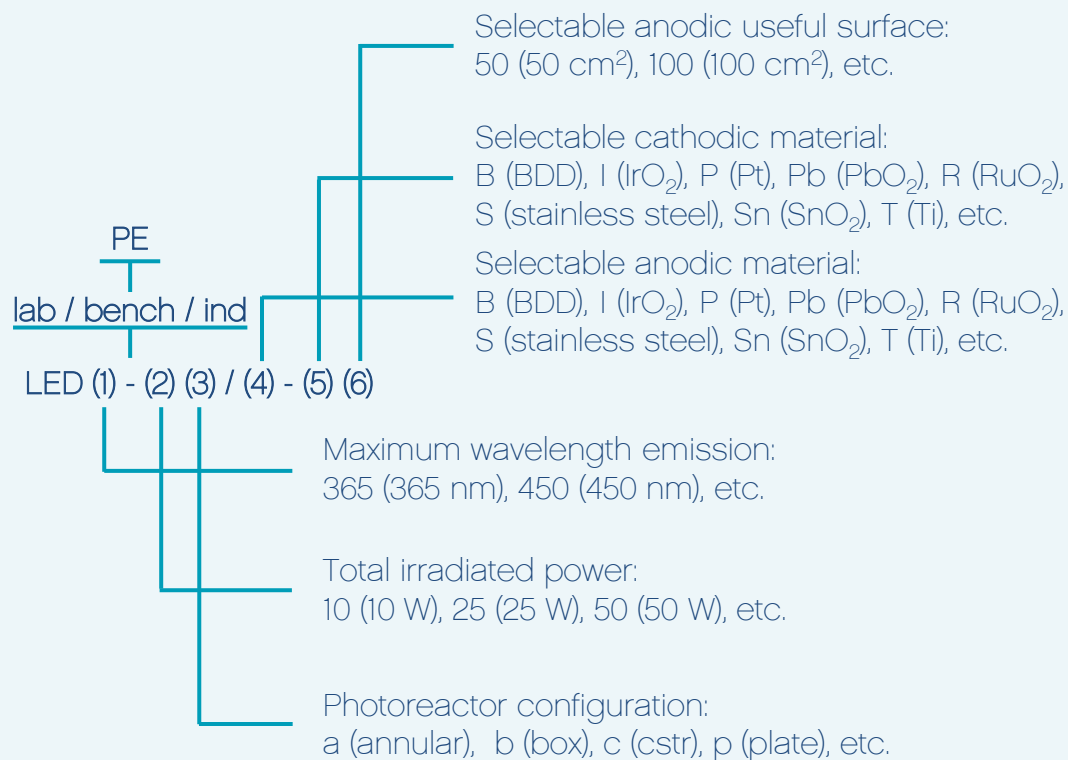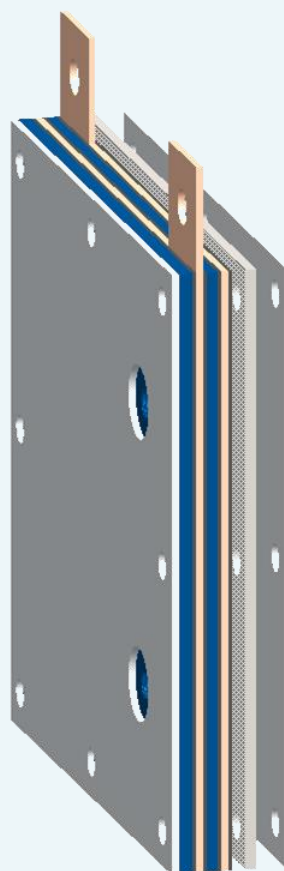


Available models: photoelectrochemical

Technologies	Photoelectrocatalysis / Photoelectro-Fenton
Source of light technology	Light emitting diodes (LED)
Reactor configuration	Annular / Plate and frame
Source of light configuration	External radiation / External + internal radiation / Internal radiation
Volume of treatment / flow rate	Selectable
Operation mode	Alternating / Batch / Continuous
Scale	Laboratory / Pilot / Industrial
Radiation type	UV-A / UV-B / UV-C / visible / IR
Radiant flux	Adjustable through an electric console with PLC
Refrigeration system for the LED	Forced air convection
Anodic useful surface	Selectable
Separation between electrodes	Adjustable and selectable (> 1 mm)
Number of anode-cathode compartments	Selectable
Electrodes material	BDD / IrO ₂ / Pt / PbO ₂ / RuO ₂ / Stainless steel / SnO ₂ / Ti
Reactor material	Borosilicate / Methacrylate / PP / Quartz / Stainless steel
Sealing gaskets material	EPDM / TPU / Viton®
Connection type	Barb fitting / Quick plug
Optional features	Automatization / Online measurements (pH, O ₂ , etc.) / Jacketed reactor / Mirror finish / System to recover the photocatalyst / Temperature control

• Equipment references: photoelectrochemical

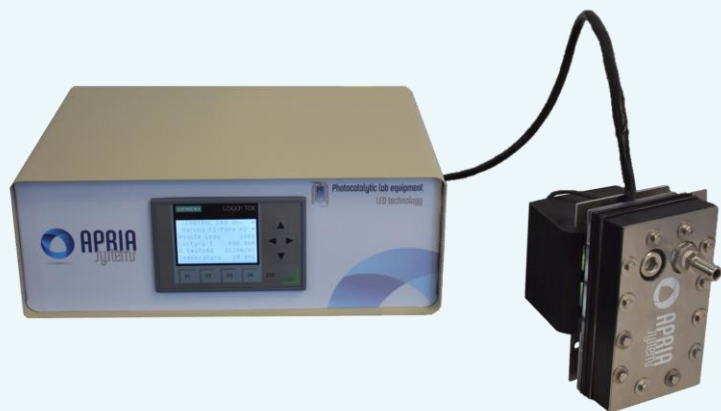

PElab LED365-3p/S-N25

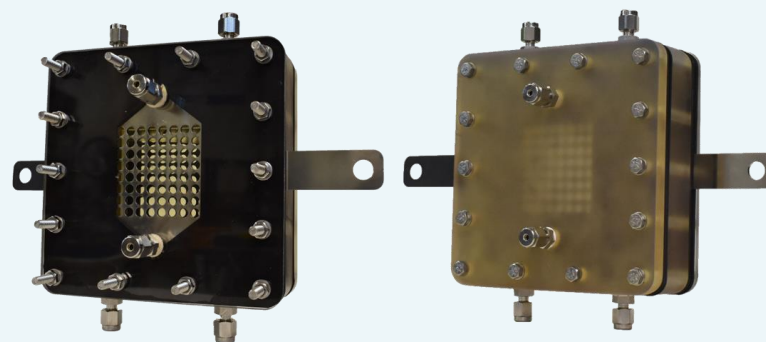

PElab c/R-S25



PElabLED365-5/450-5p//S-S50




PElab LED365-16c/T-S430



Introduction

ELOXIRAS® is an innovative process for the treatment and reuse of marine and brackish **water**, developed to enhance the productivity and to reduce the environmental impact of recirculating aquaculture systems (RAS).

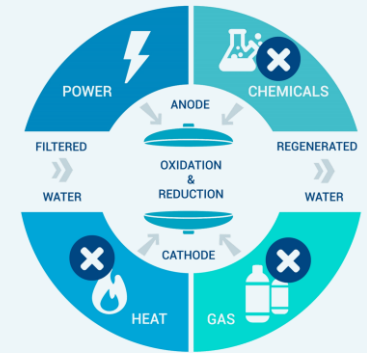


Based on the electrochemical oxidation technology, it only requires an electrical potential between two electrodes in water.

POLLUTANT	CONVENTIONAL TREATMENTS	ELOXIRAS®
TAN	Moderate	Excellent
Nitrite	Moderate	High
Organic matter	Low	High
Pathogens	No removal	Excellent

High removal rates of contaminants are achieved, such as total ammonia nitrogen (TAN), nitrite, and dissolved organic matter, together with high disinfectant efficacy.

• Stages of the treatment

- 1 Pre-treatment by filtration of the water.
- 2 Main treatment by means of electrooxidation reactors for the removal of ammonia, nitrite, organic matter, and pathogens.
- 3 Post-treatment for the elimination of oxidation by-products and the balance of gases.

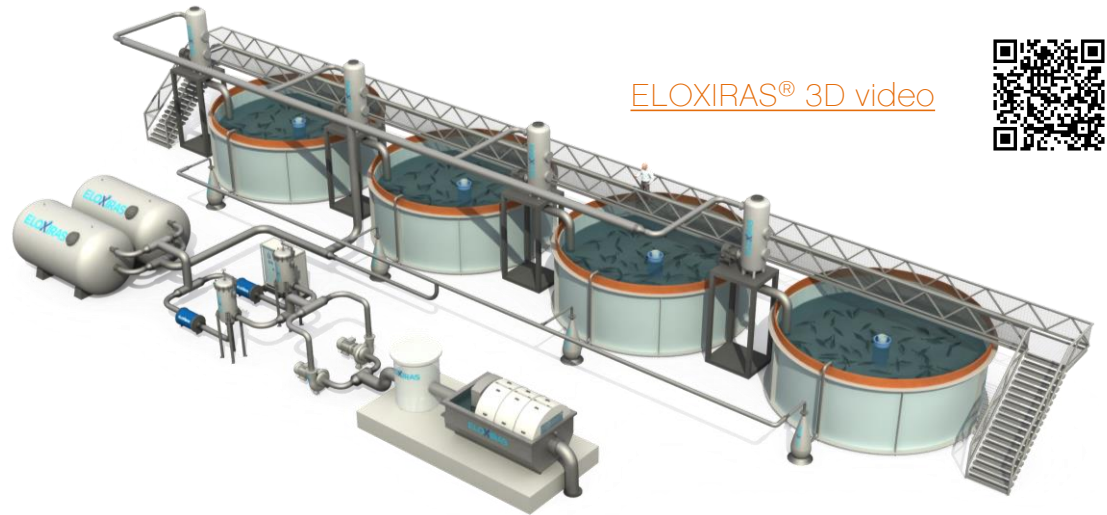

• Available models

ELOXIRAS® is commercialized in several standardized models, based on its market application, its treatment capacity, and its functionalities, thus, offering the clients the possibility of designing a customized product adapted to the specific needs of their RAS system.



ELOXIRAS® (1)-(2)-(3)

- 1 Market applications
MINI, HYBRID, and LOGISTIC.
- 2 Treatment capacity
30, 150, 300, 600, 1500, 3000, etc.
- 3 Functionalities
Concept, Basic, Comfort, and 4.0.

Equipment references



ELOXIRAS® MINI-300-4.0



ELOXIRAS® MINI-600-4.0

• Introduction

Our know how in the area of chemical engineering allows us to act as a technological supplier of other equipment, such as microbial fuel cells, bioreactors or test benches. For tailored equipment, please do not hesitate to contact us.

• Equipment references



MFClab S-S400



MFCbench T-T5000




Multipump test plant.



R&D ACTIONS

For our team, each client is special and requires specific and customized solutions always based on the latest technology, which we contribute to develop and transfer to the market with a continuous effort in R&D.

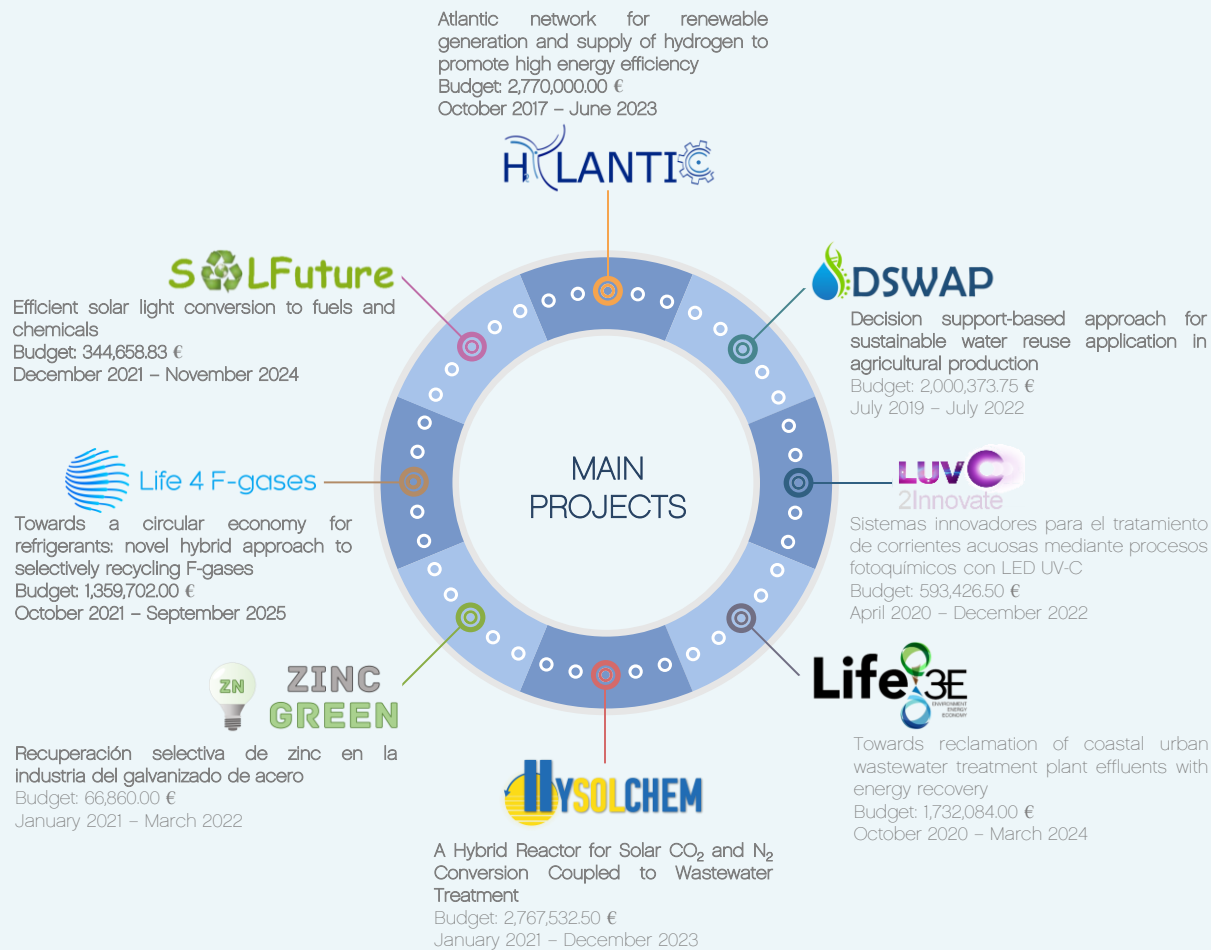



Parque Empresarial de Morero

Parcela P.2-12, Nave 1 - Puerta 5

39611 Guarnizo, Cantabria, Spain

Phone: +34 942 078 147

Cell phone: +34 656 317 801

e-mail: comercial@apriasystems.es

Website: www.apriasystems.es